eNet SMART HOME connect

QUICK START GUIDE

CONTENTS

Preparation	Page 3
Creating a project	Page 6
Creating a building structure	Page 7
Searching for devices	Page 9
Adding devices to a selected room and configuring them	Page 10
- Device configuration using the example of a wall transmitter	Page 11
- Device configuration using the example of a switch actuator	Page 13
Creating connections	Page 15
Programming the project in devices	Page 23
Finalizing the project	Page 24

Ensure that

- all eNet devices are already installed.
- the operating mode selector switch is set to “PC”:

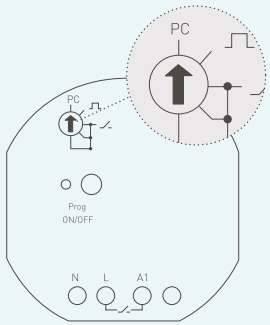

- the programming button is accessible, or alternatively the mains voltage can be switched off as desired.
- all batteries are inserted and devices with batteries are charged (e.g. solar sensor).
- the eNet server is connected to the mains voltage and to the router via a network cable.
- PC or tablet with web browser are also in the same network.
- eNet server and smartphone are in the same network.
- you have downloaded the eNet SMART HOME app to your mobile phone.

GET IT ON Google Play

Download on the App Store

Open the eNet SMART HOME app and connect to the eNet server.

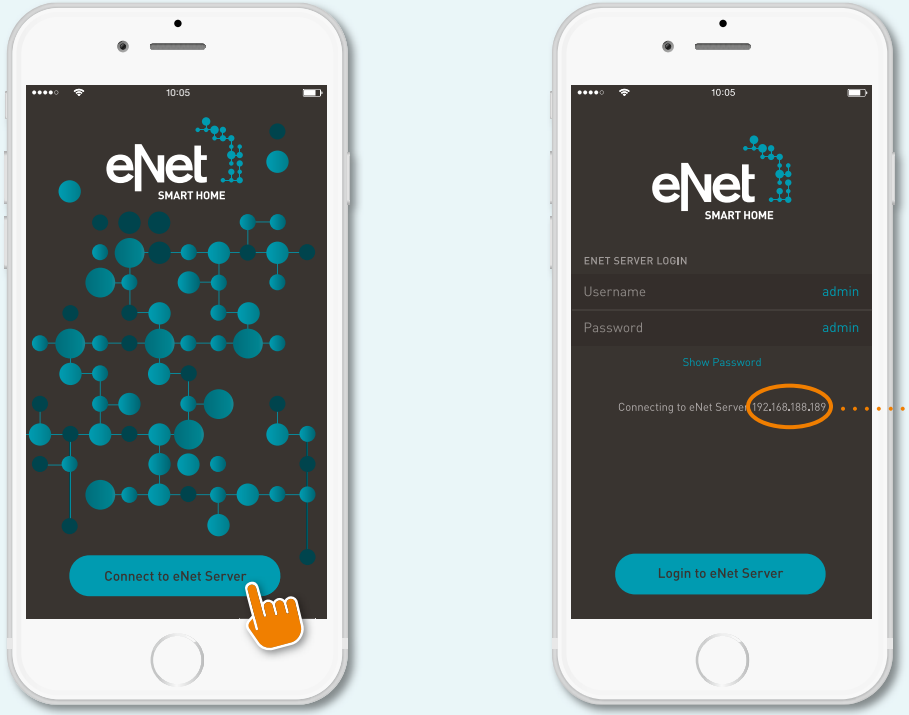

Enter the displayed IP address in the web browser (PC or tablet).

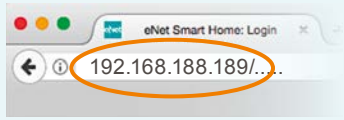

PREPARATION

Log onto the PC or tablet with user-name “admin”and password “admin”

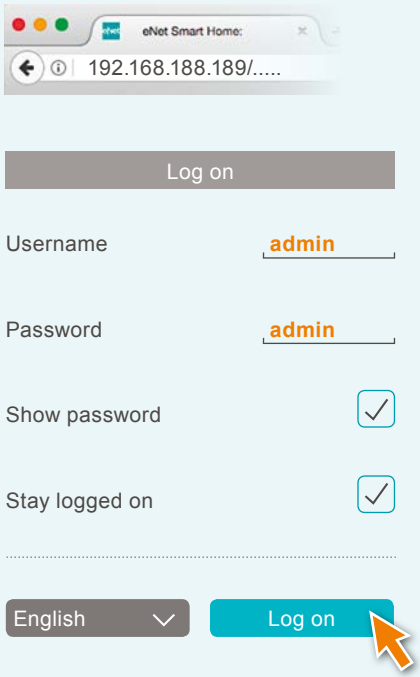

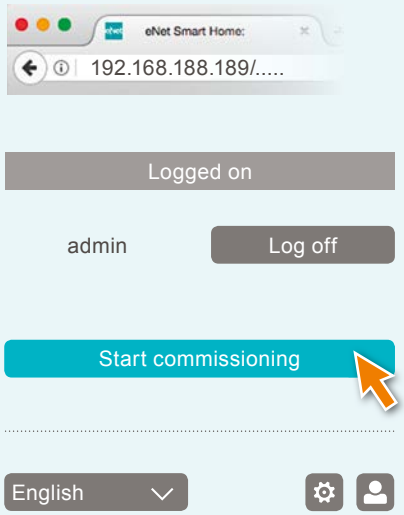

Start commissioning

CREATING A PROJECT

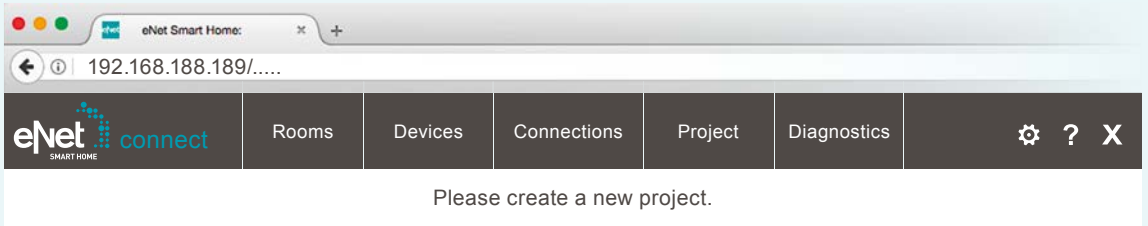

Create project

Specify the project name

Project name **Sample project**

Import project

Change password

Change the administrator password for security reasons

Old password ••••••

Show password

New password ••••••

Retype password ••••••

Date and time

Time 10:05

Date DD-MM-YYYY

Transfer current time

Time zone (UTC+1) CET - Central European Standard Time

Automatic time (Internet)

Select "Automatic time"

Installation location

This information is required for time control in connection with astro functions.

Specify the installation location*

Location Germany Lüdenscheid

Manual

Coordinates 51° 13° 38° N 7° 35° 57° E

Create project

To next step

* Location and time data are relevant for automatic functions. "Automatic time" requires an Internet connection

CREATING A BUILDING STRUCTURE

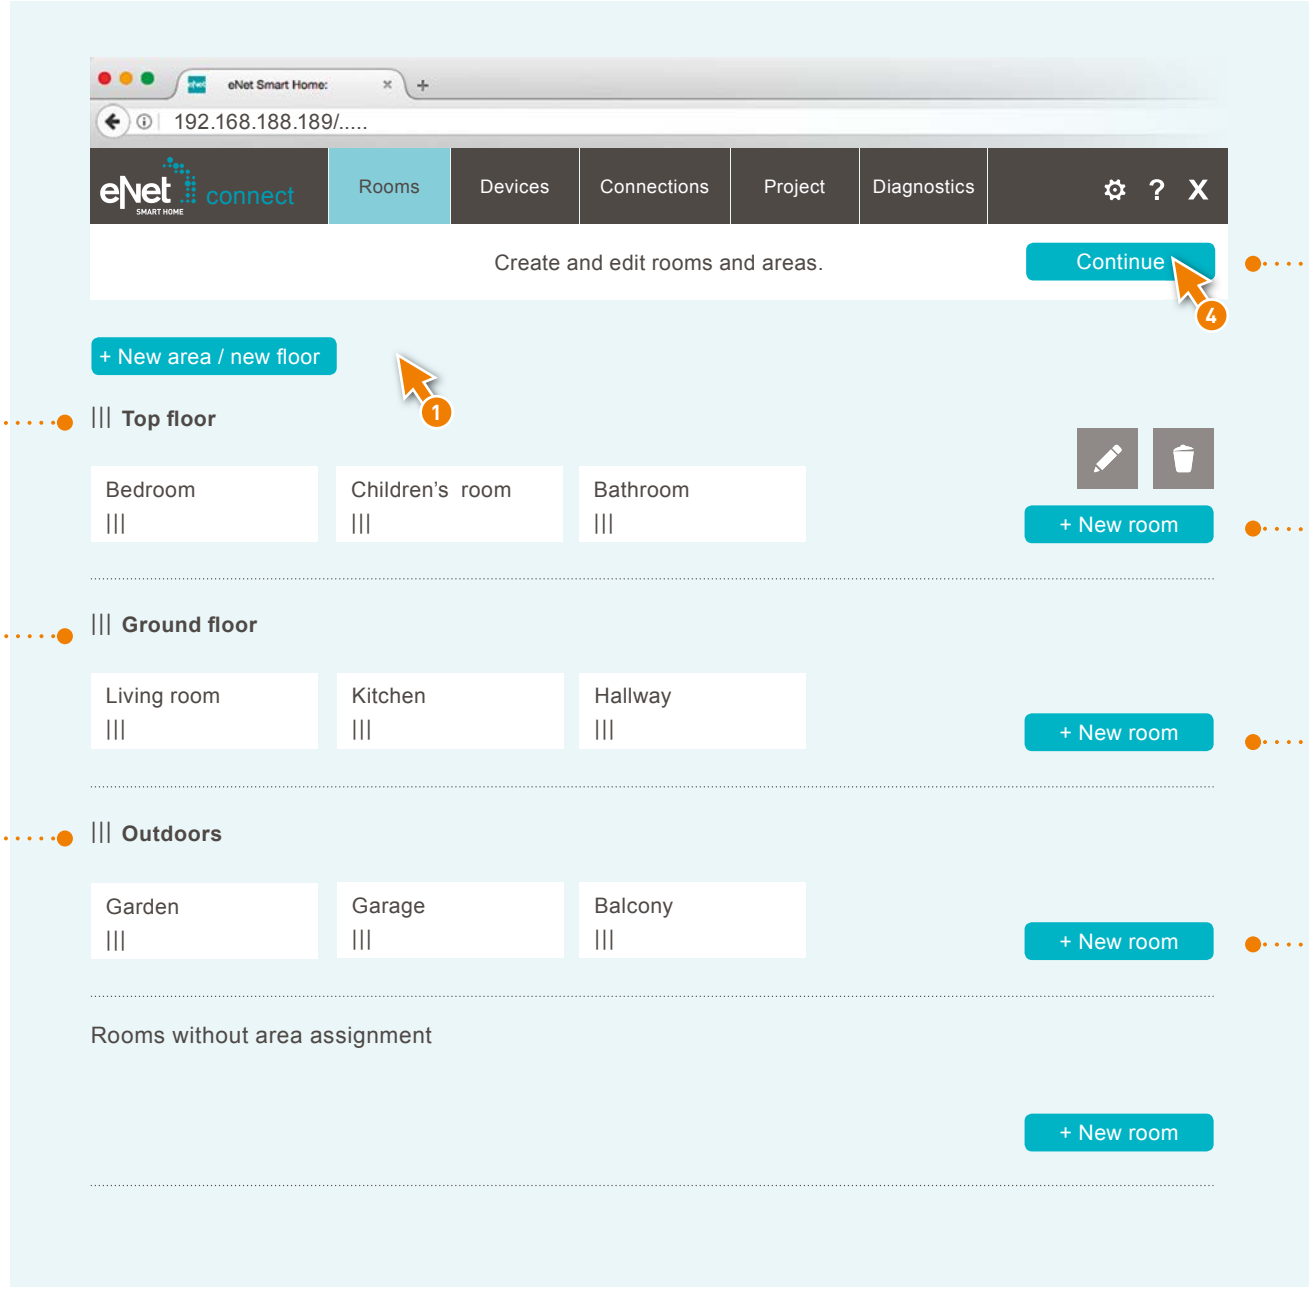

*In the case of a flat, there is no need for you to create floors. It is sufficient to simply add new rooms.

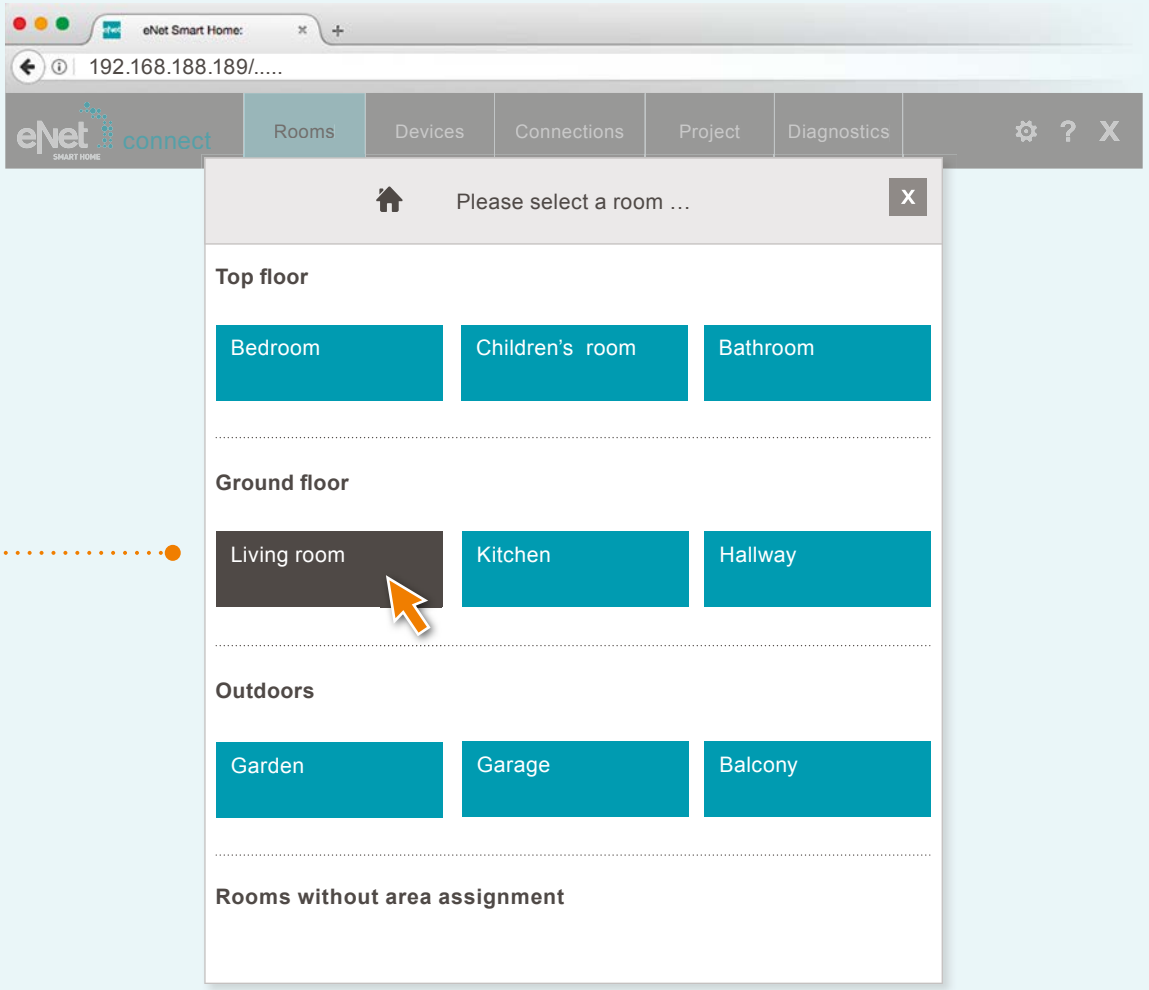

Select the room the devices you are adding in this step are installed in

SEARCHING FOR DEVICES

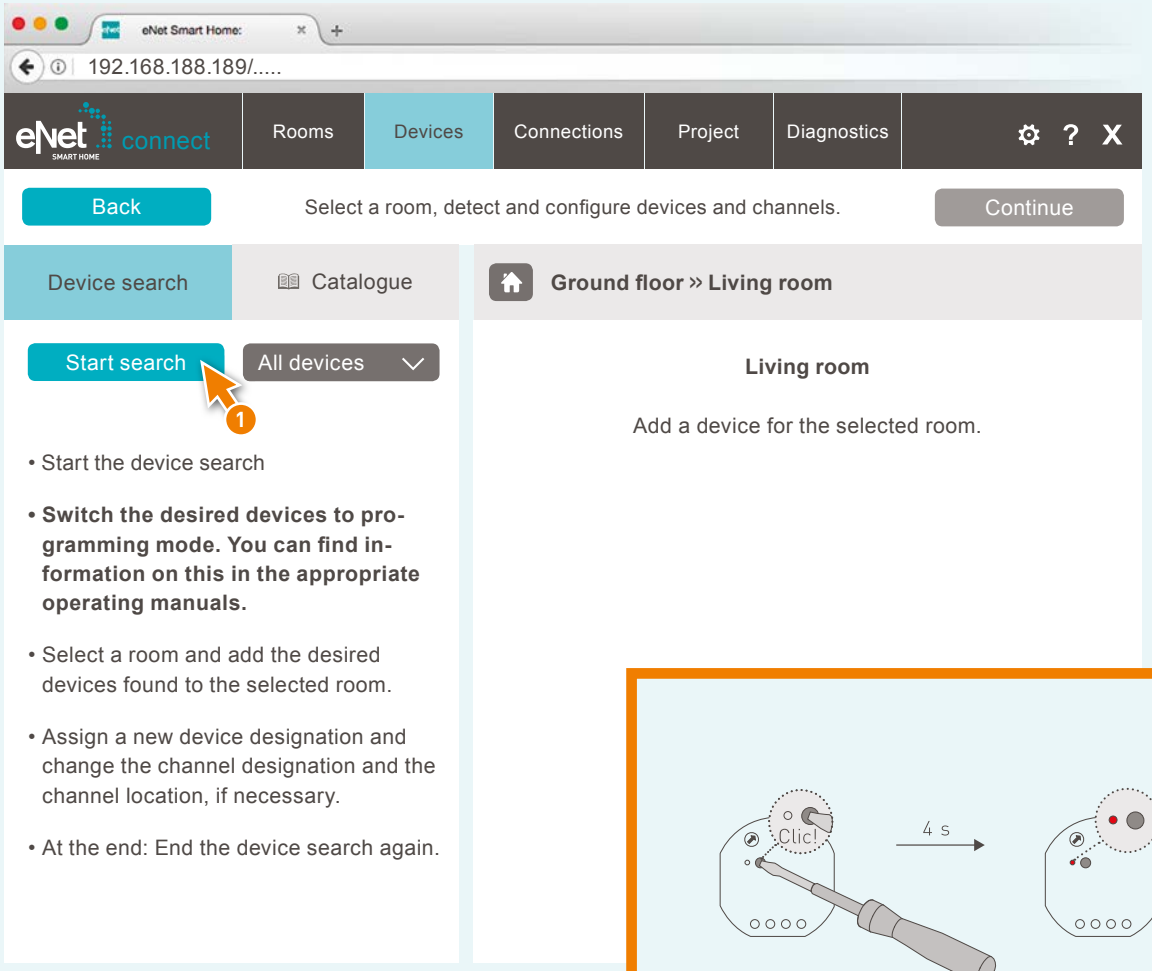

Start the device search

Set the device installed in the selected room to programming mode

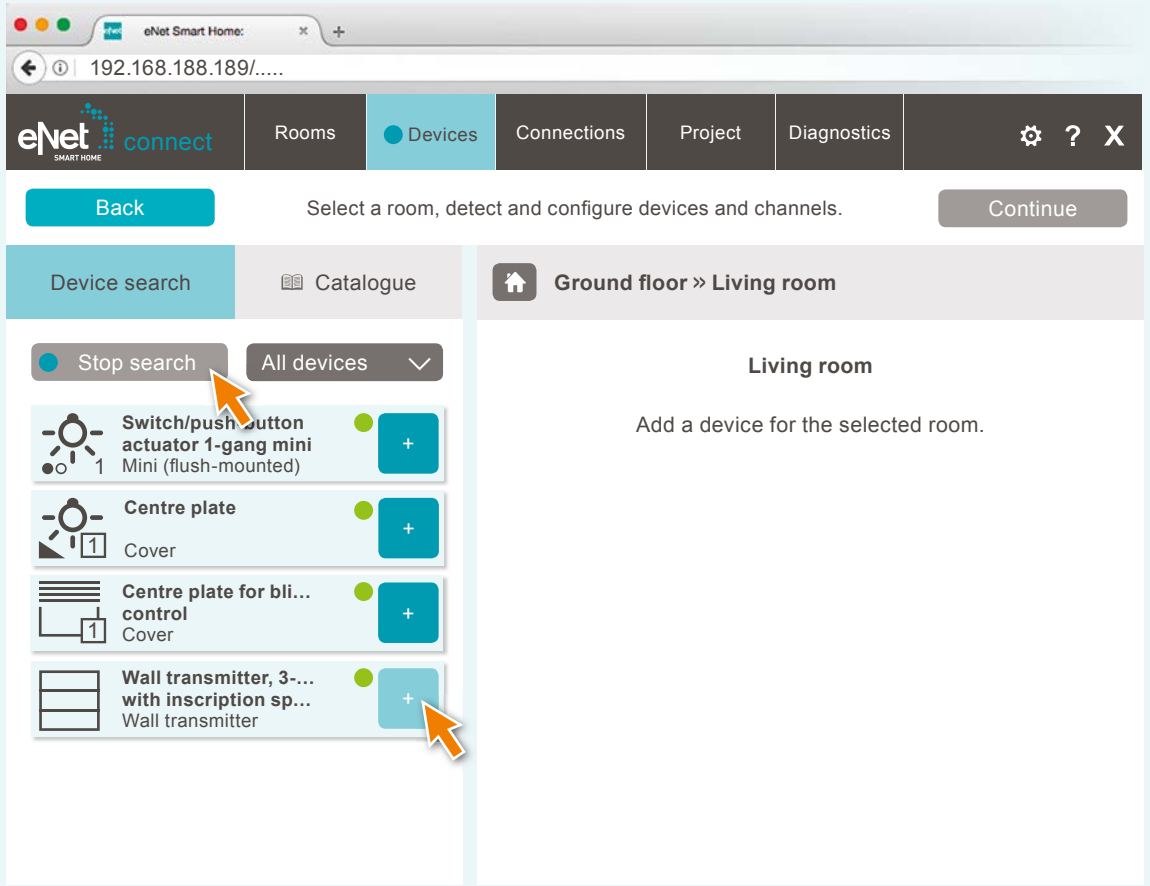
Stop the search as soon as all devices have been found
Add devices to the selected room
eNet Smart Home:
192.168.188.189/.....
eNet connect
Rooms
Devices
Connections
Project
Diagnostics
Back
Select a room, detect and configure devices and channels.
Continue
Device search
Catalogue
Ground floor » Living room
Stop search
All devices
Switch/push-button actuator 1-gang mini
Mini (flush-mounted)
Centre plate
Cover
Centre plate for bli... control
Cover
Wall transmitter, 3-... with inscription sp...
Wall transmitter
Living room
Add a device for the selected room.
Colour legend
No device access
Device not accessible or in an invalid Name
Device not programmed or changes exist
Device programmed, no changes exist

ADDING AND CONFIGURING DEVICES

DEVICE CONFIGURATION USING THE EXAMPLE OF A WALL TRANSMITTER

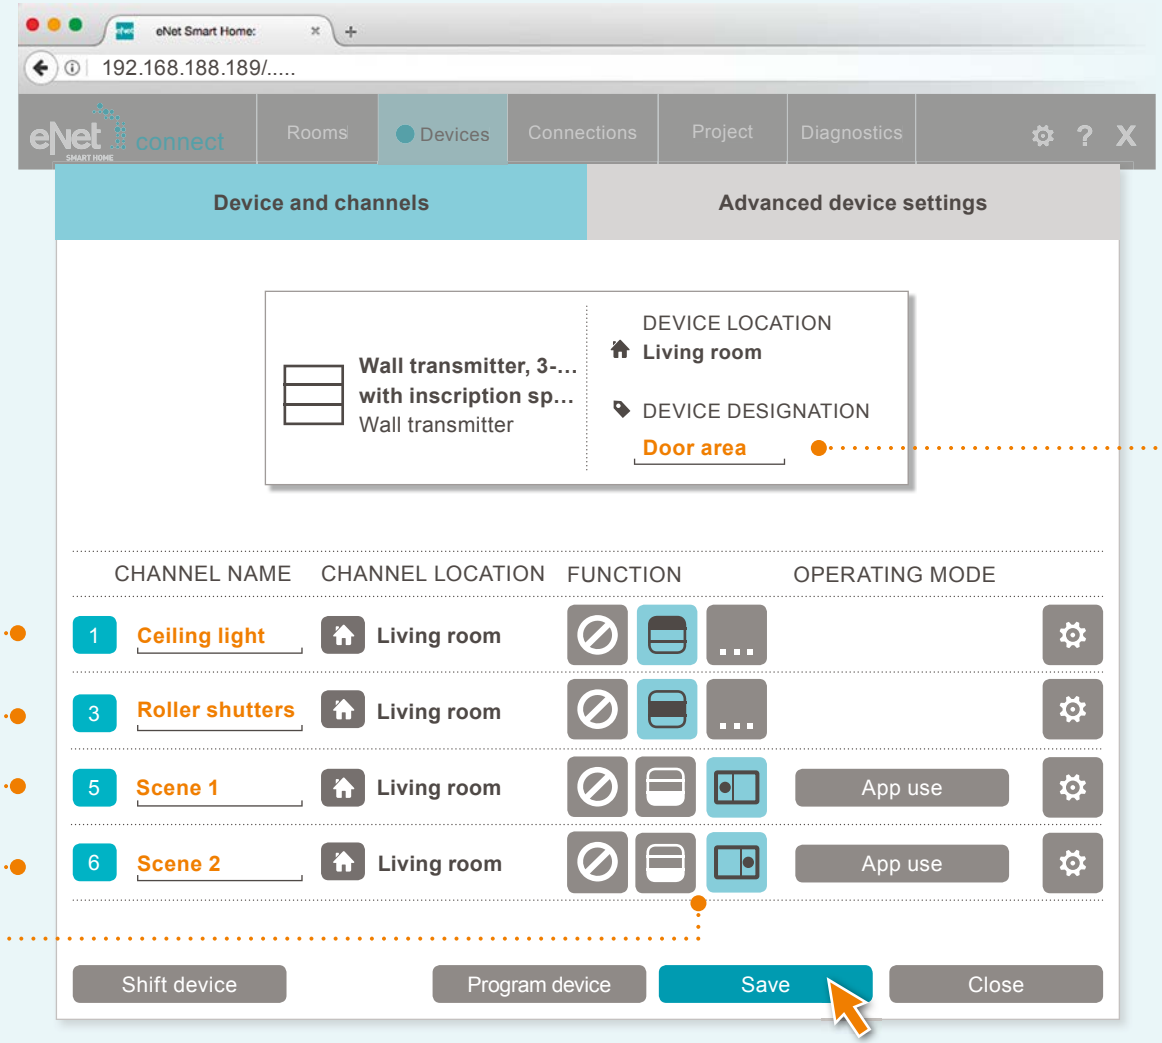

Name the transmitter channels according to their function (this label appears in the app)

Specify the purpose or function of the transmitter channel

Name the installation position of the transmitter

Save entries

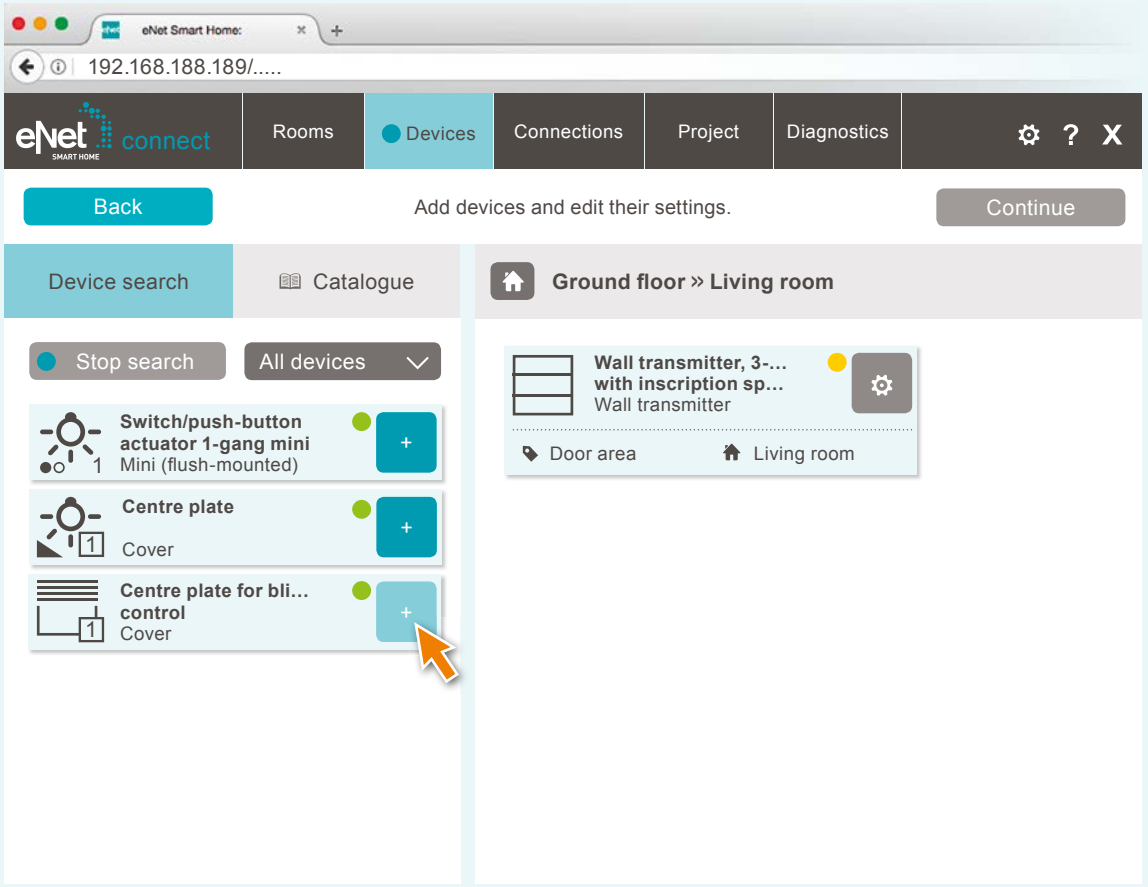

Add other devices needed in the room

ADDING AND CONFIGURING DEVICES

DEVICE CONFIGURATION USING THE EXAMPLE OF A SWITCH ACTUATOR

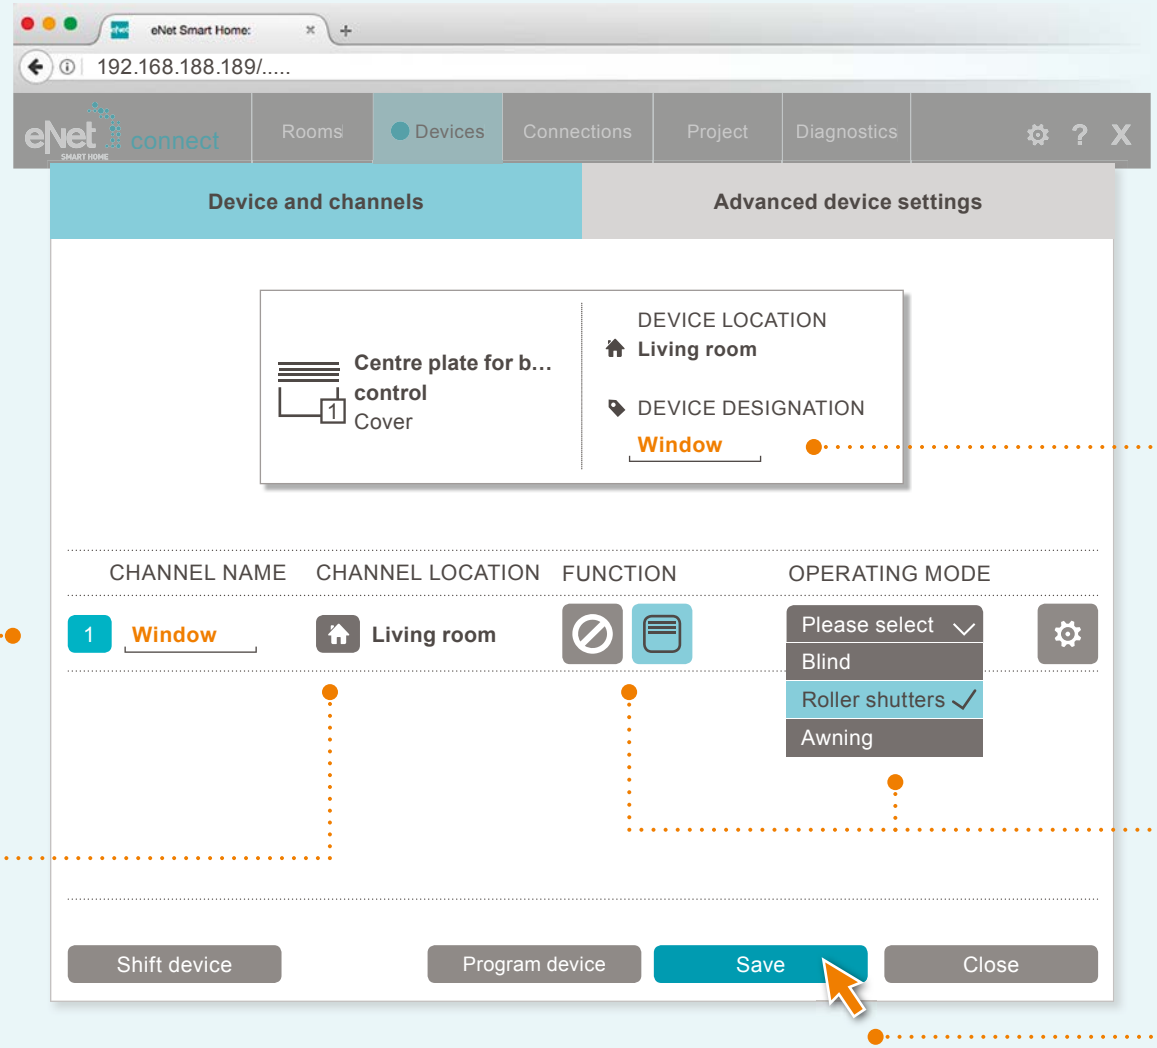

Name the Installation position of the actuator

Name the actuator channels according to their function (this label appears in the app)

Select a room in which the channel is active

Specify the function and operating mode of the actuator channel

Save entries

Configure all devices in this way, room for room

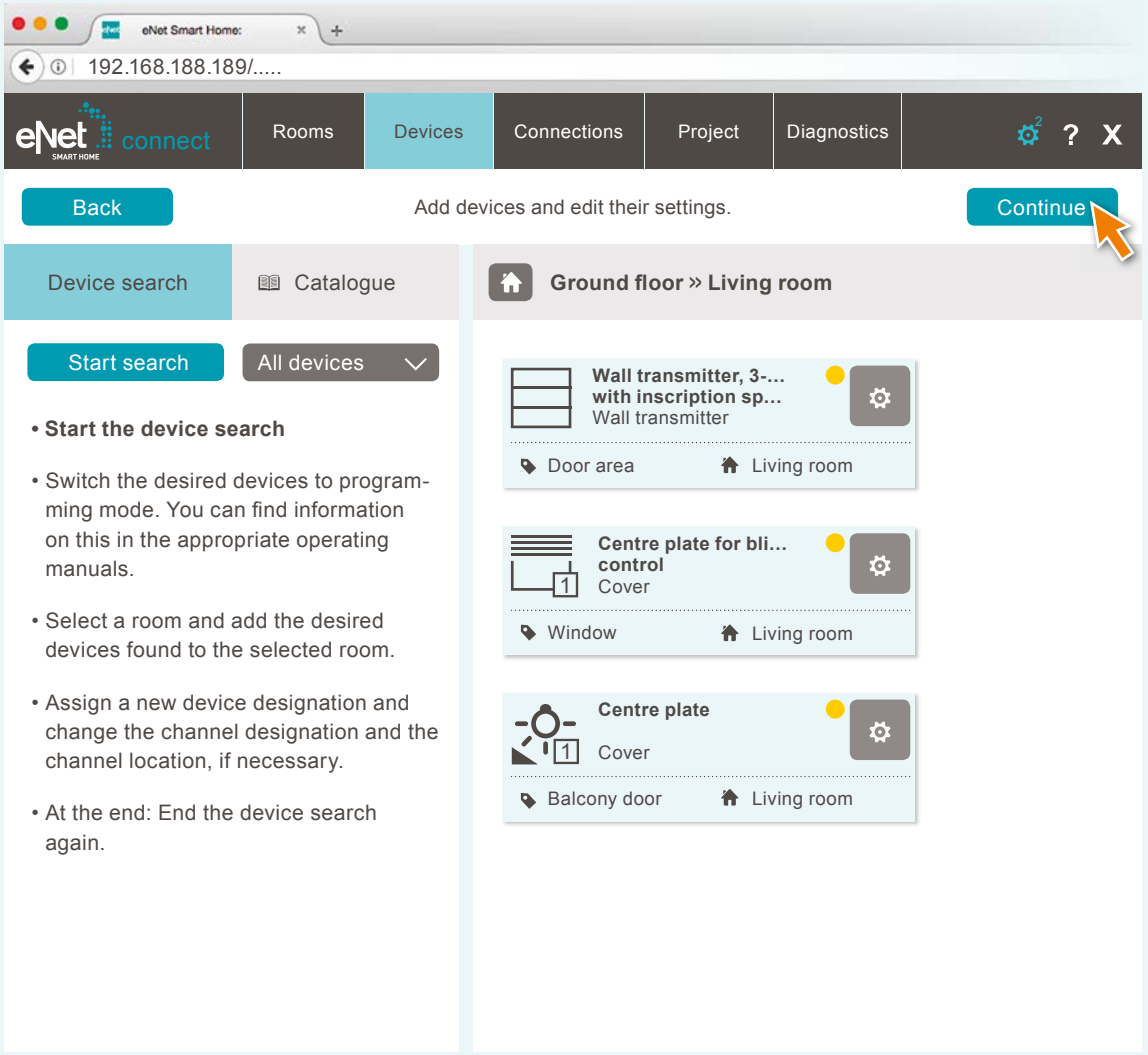

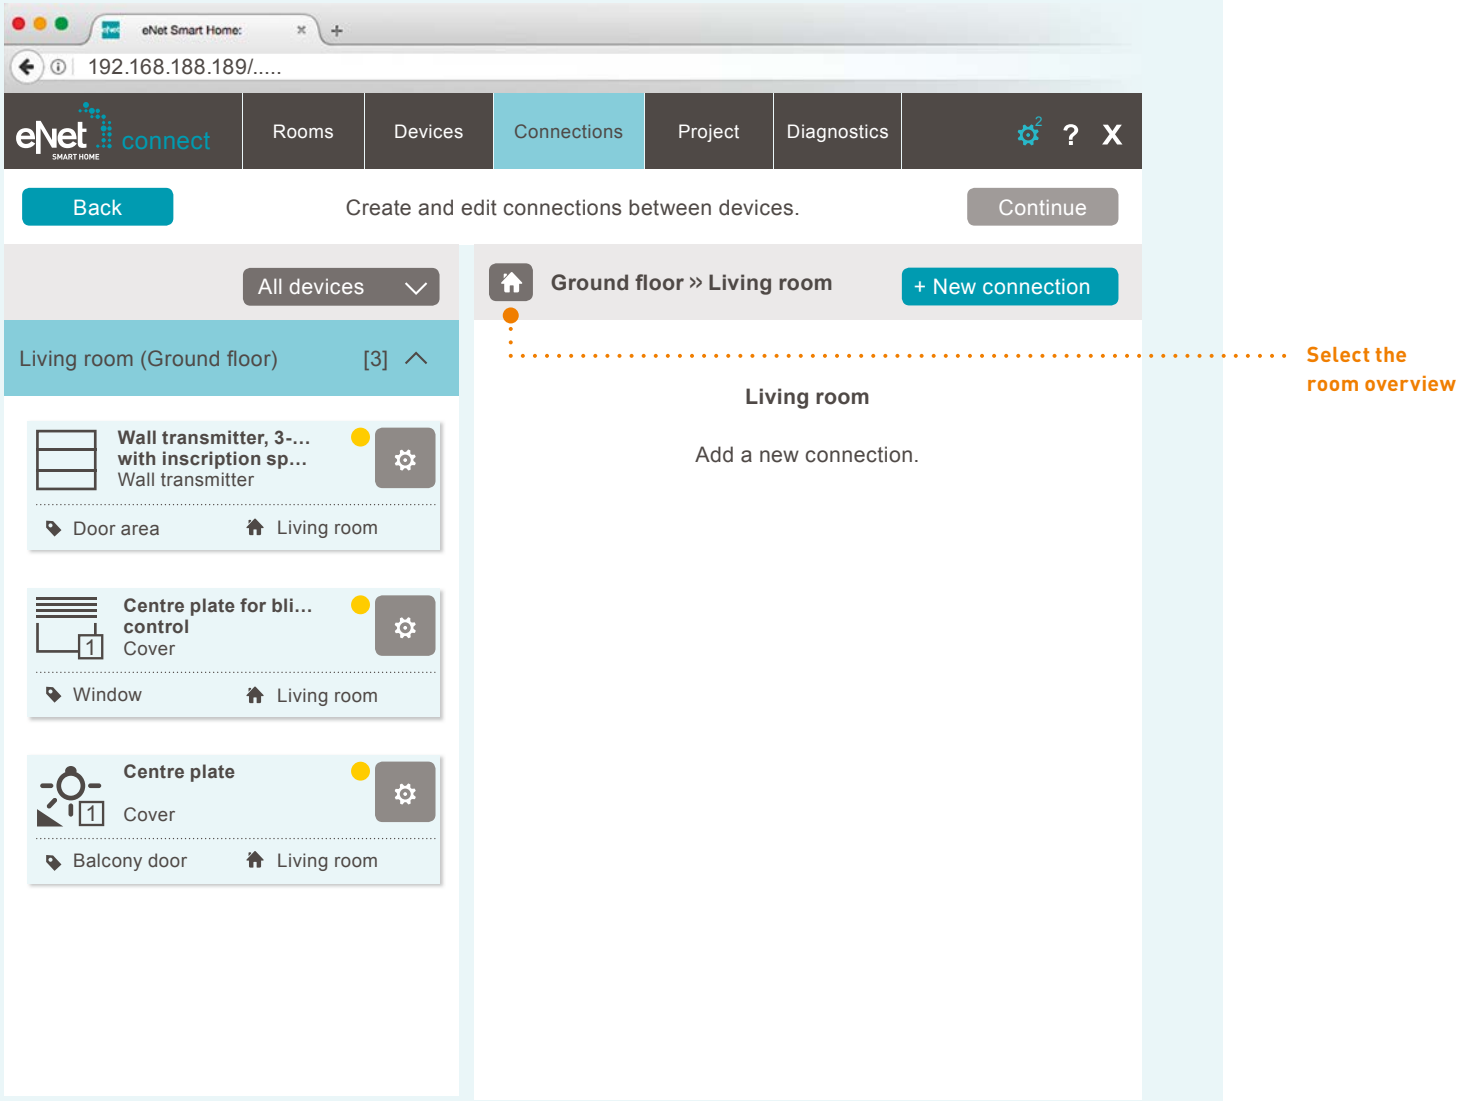
eNet Smart Home:
192.168.188.189/.....
eNet connect
Rooms
Devices
Connections
Project
Diagnostics
Back
Create and edit connections between devices.
Continue
All devices
Ground floor » Living room
+ New connection
Living room (Ground floor) [3]
Wall transmitter, 3-... with inscription sp...
Wall transmitter
Door area
Living room
Centre plate for bli... control
Cover
Window
Living room
Centre plate
Cover
Balcony door
Living room
Select the room overview
Living room
Add a new connection.

CREATING CONNECTIONS

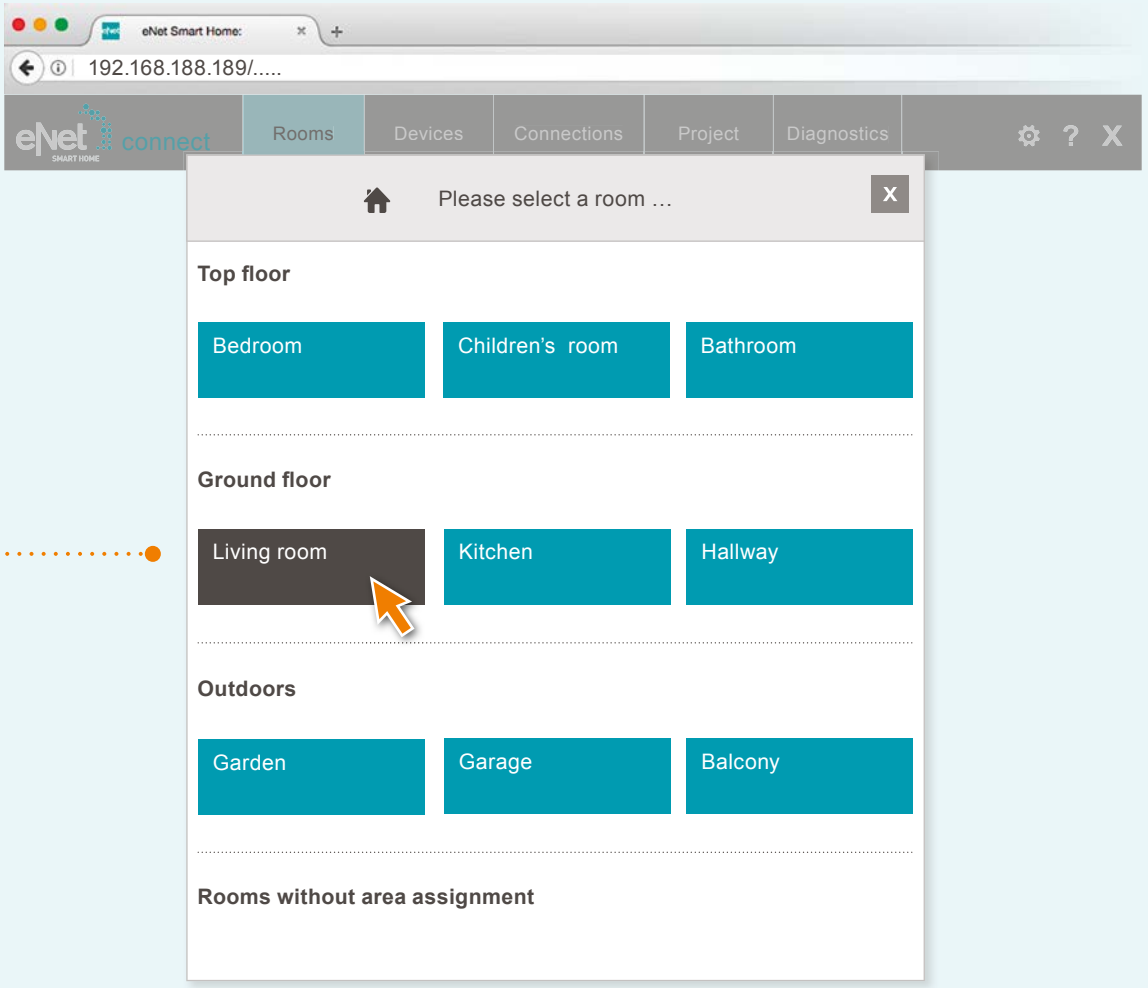

Select a room in which the connections are to be created*

* The selection of the room is only intended to provide a better overview within the project.

CREATING CONNECTIONS

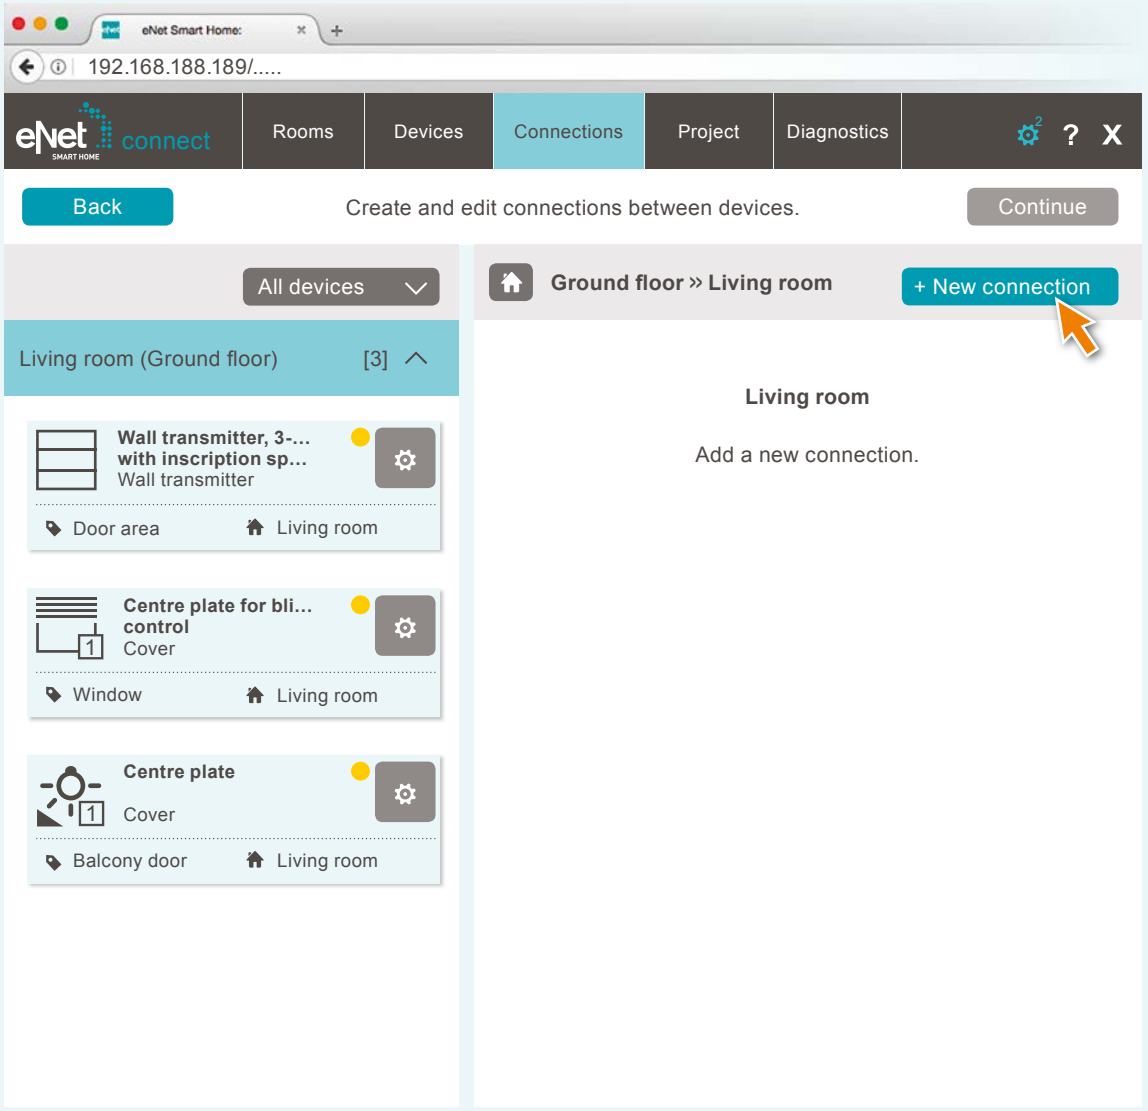

* Connections are created, e.g. for the use of hand-held and wall-mounted transmitters

CREATING CONNECTIONS

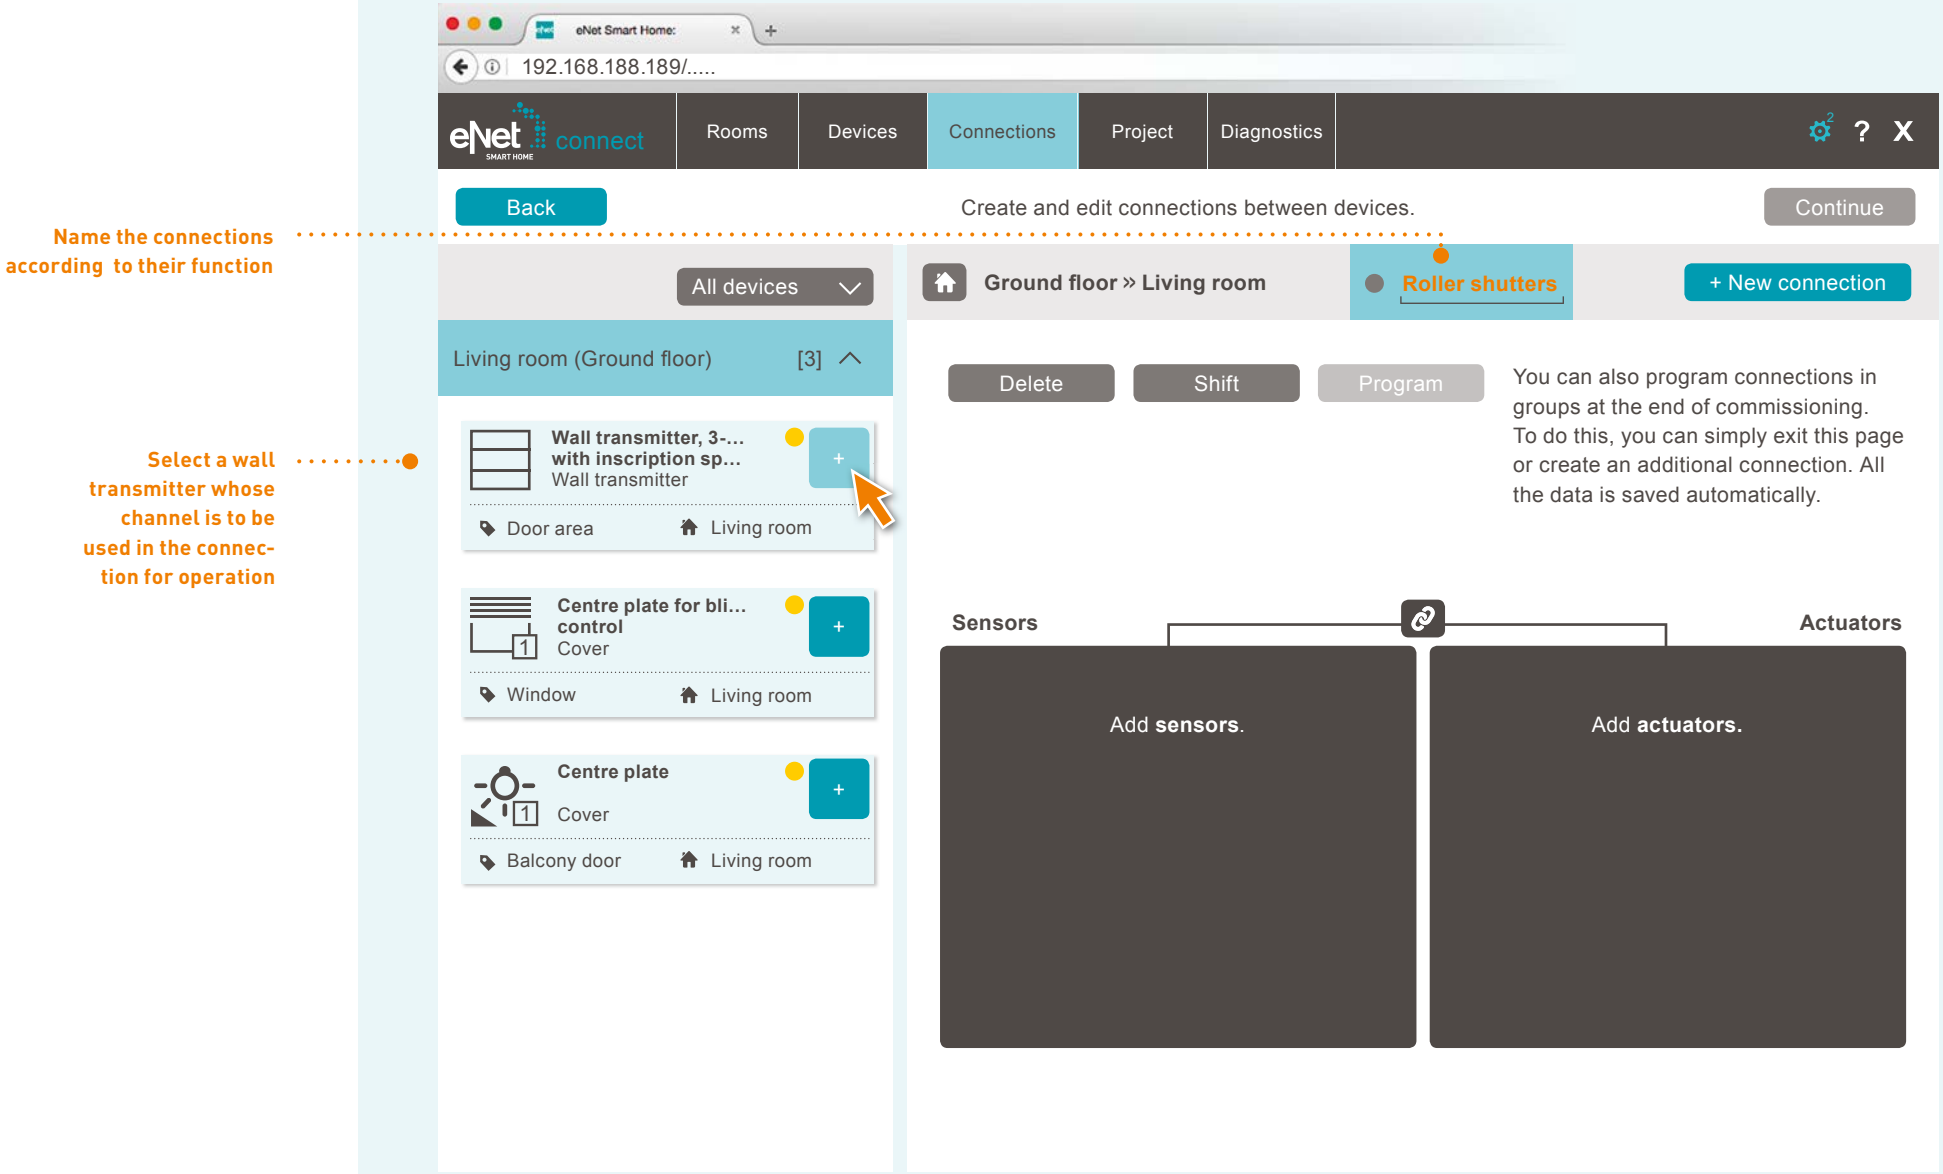

CREATING CONNECTIONS

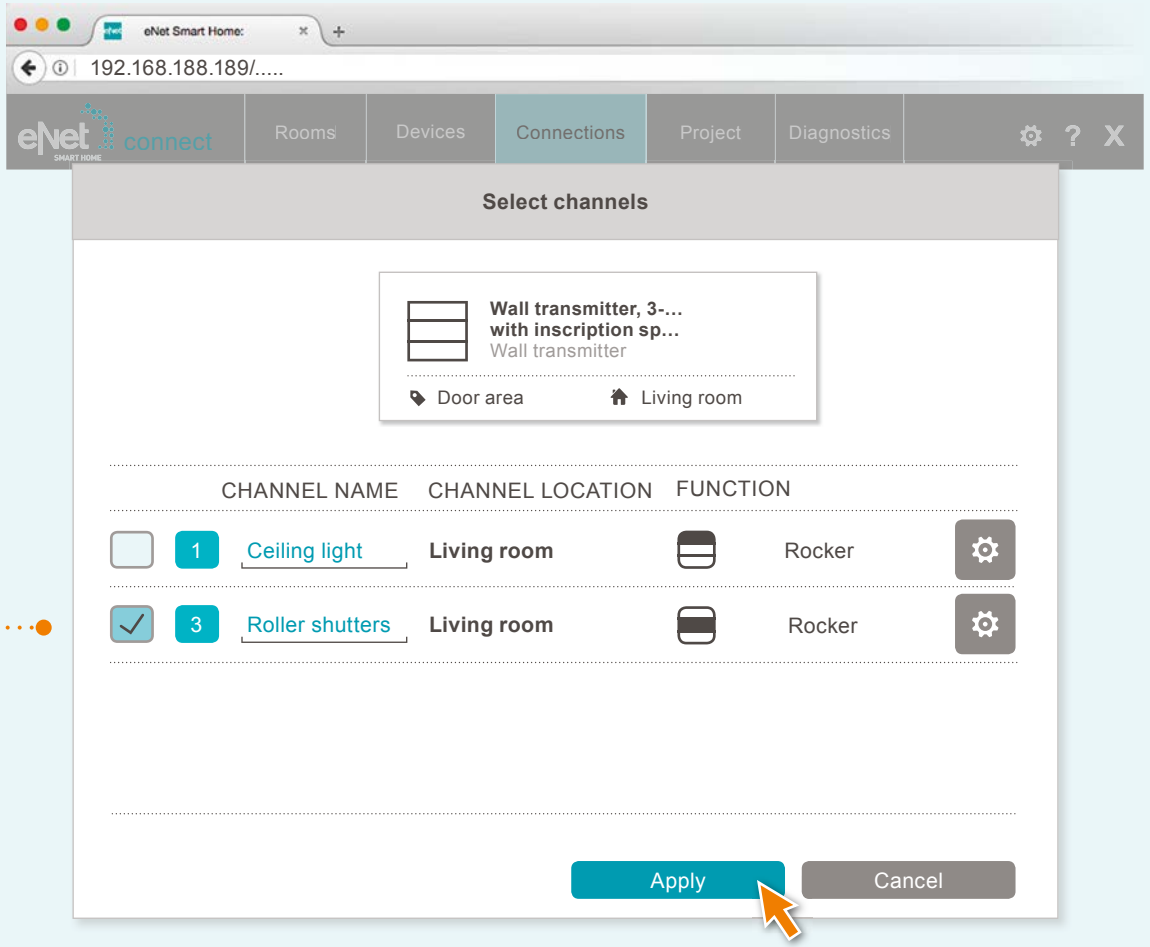

Select the required transmitter channel

Apply the connections

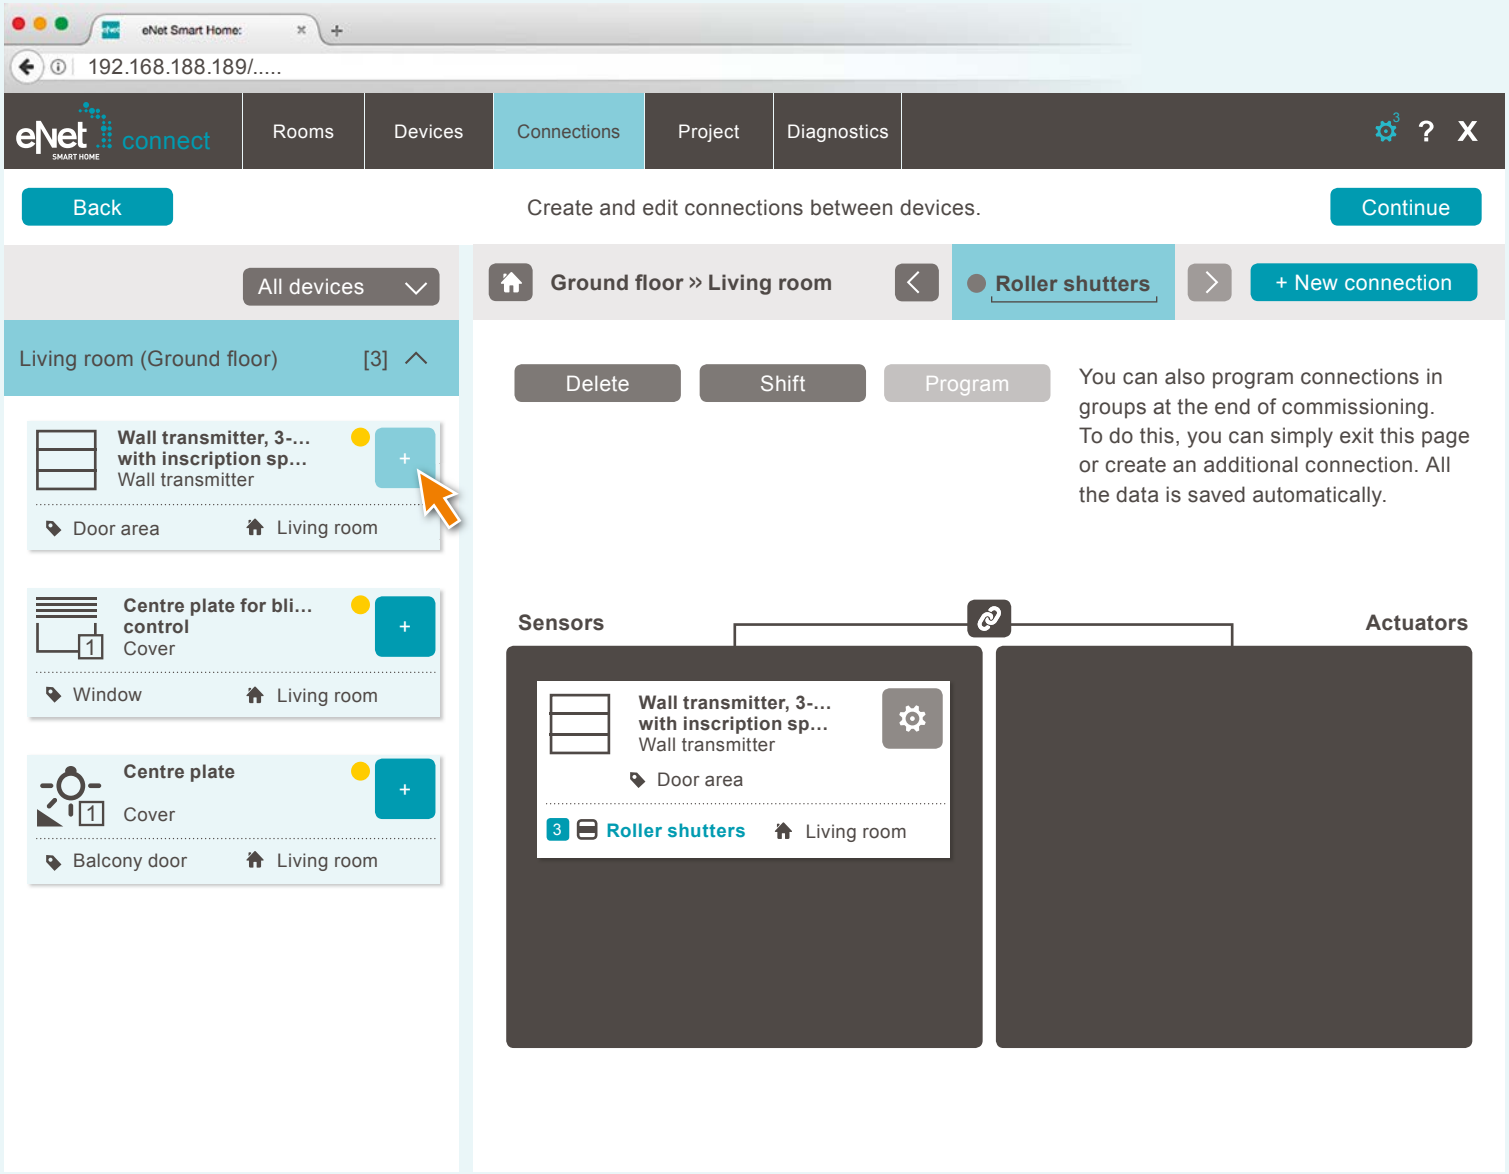

Add the actuator whose channel is to be active in the connection

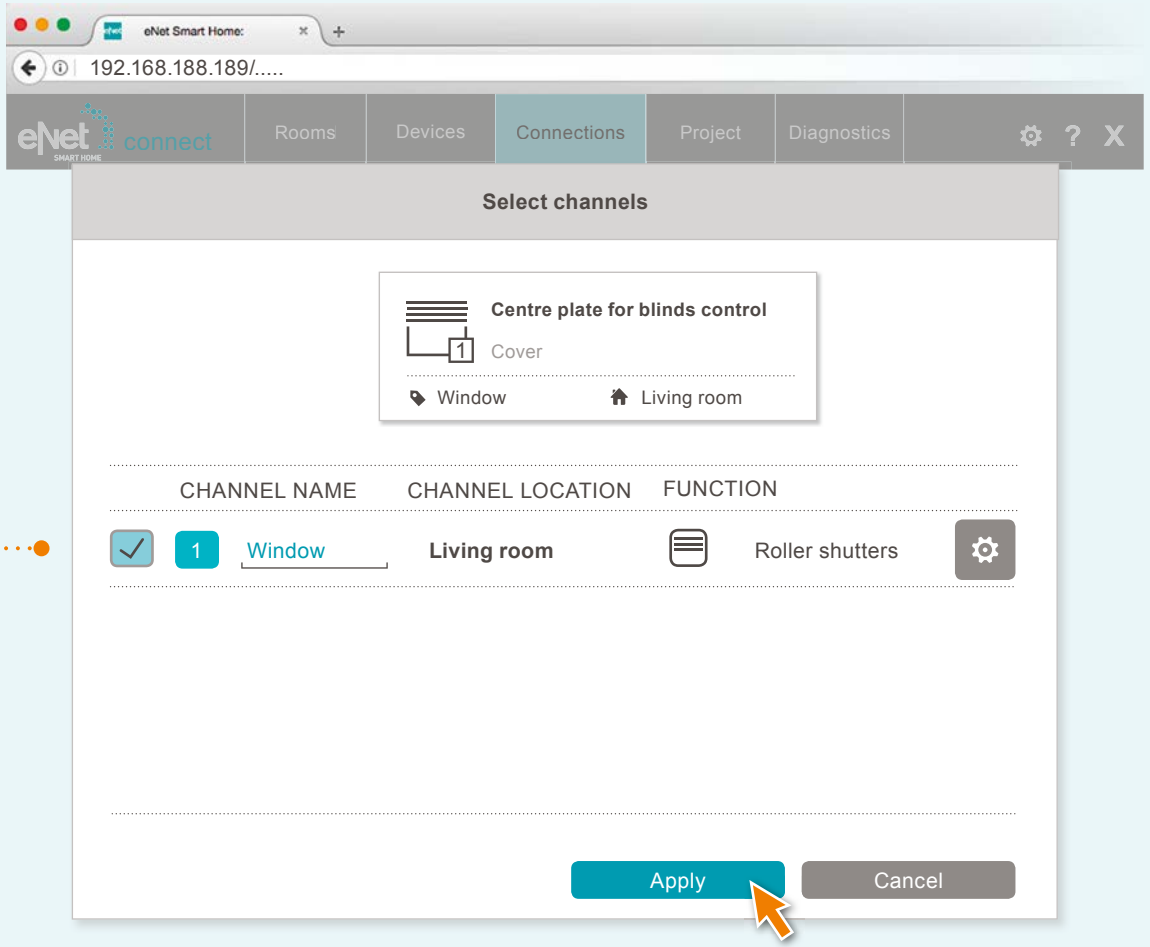

Select the actuator channel

Apply the connections

Proceed in this manner until all desired connections are created, then continue with the next step

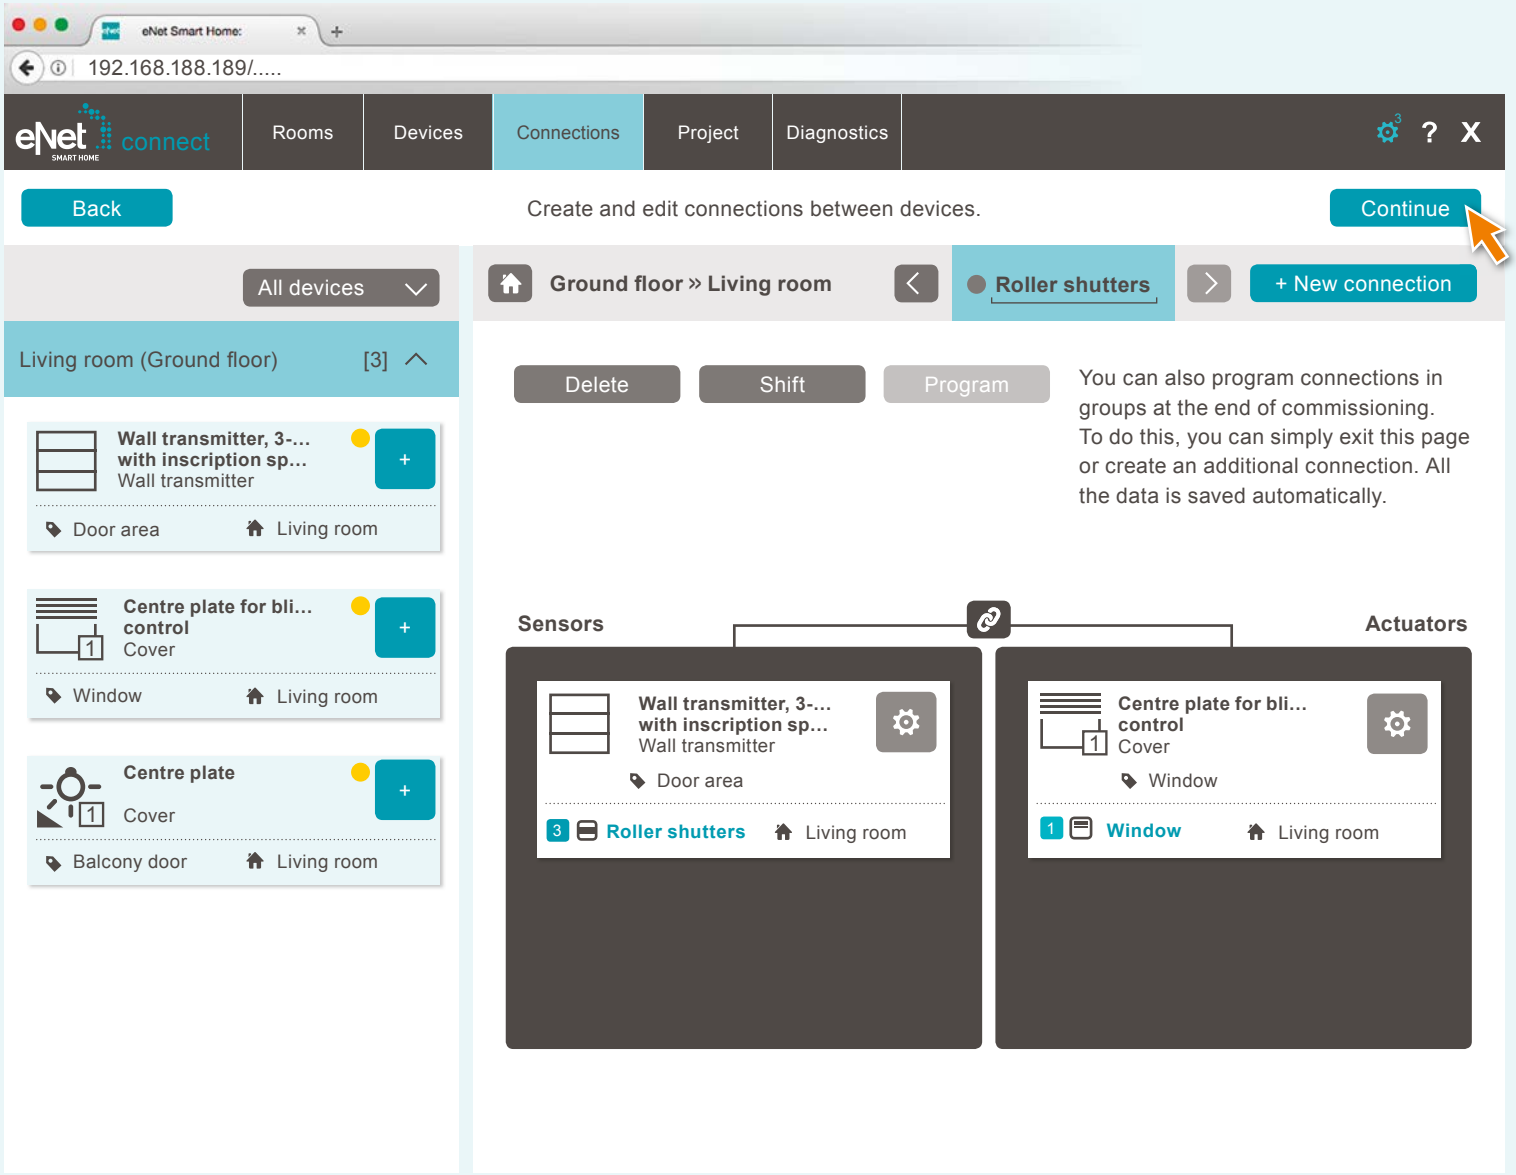

PROGRAMMING THE PROJECT IN DEVICES

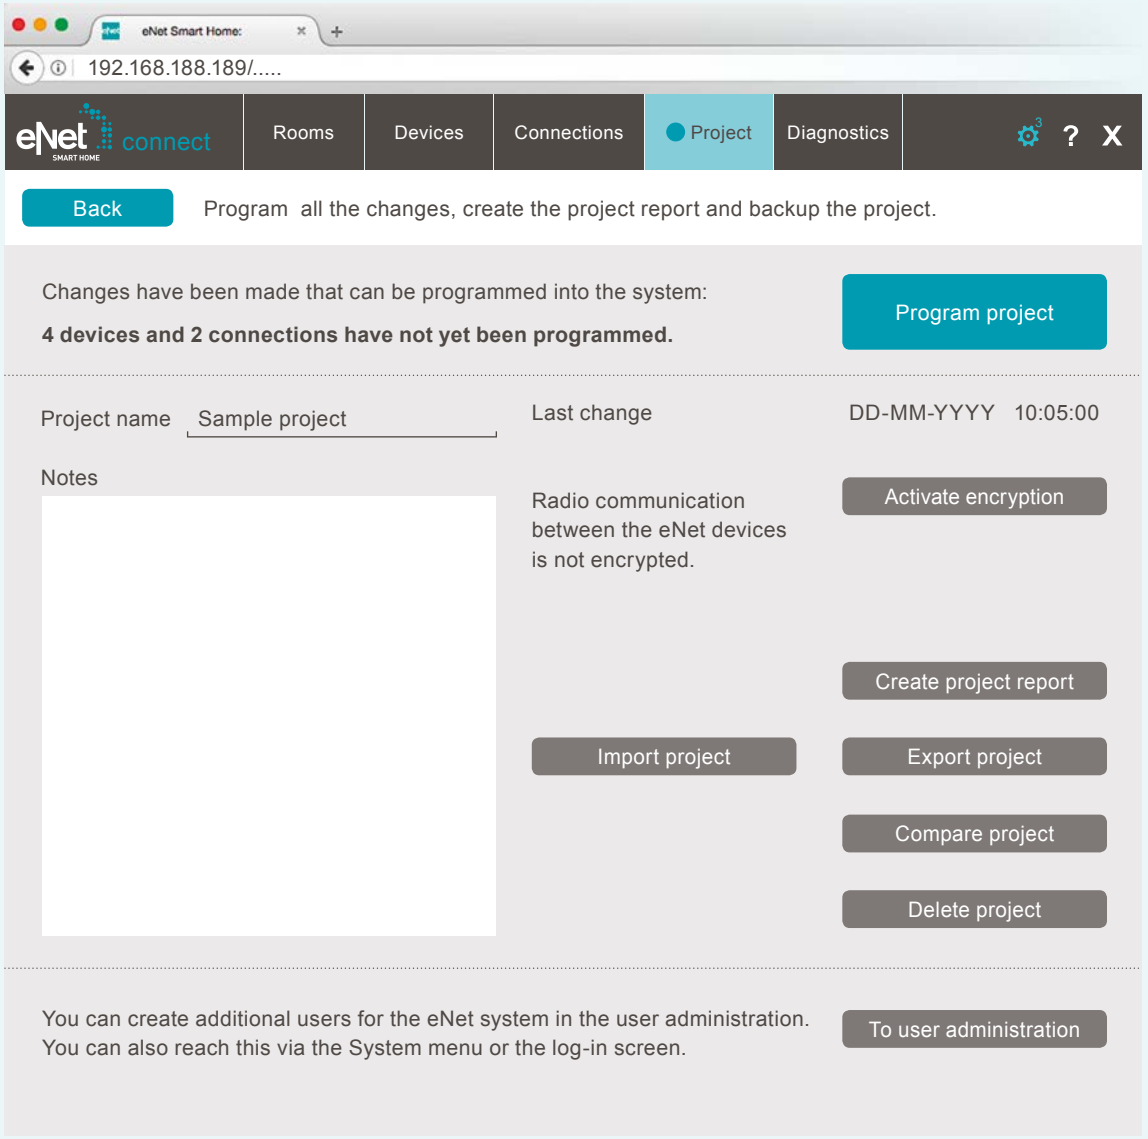

FINALIZING THE PROJECT

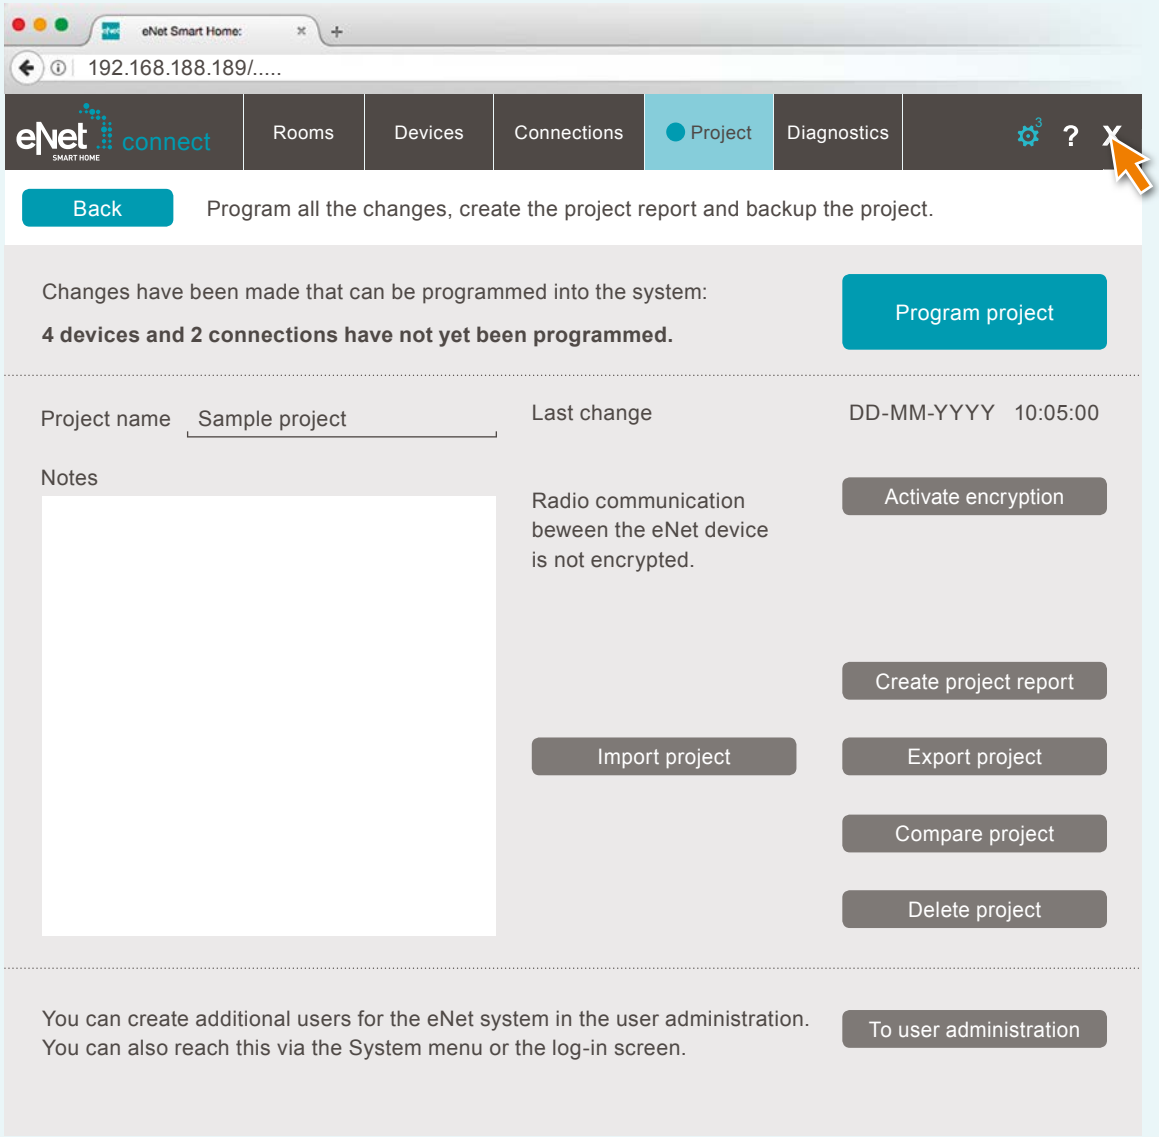

eNet
SMART HOME

Gira
Giersiepen GmbH & Co. KG
Dahlienstrasse
P.O. Box 12 20
42477 Radevormwald
Germany
Tel. +49 21 95 602 0
Fax +49 21 95 602 191
www.gira.com
info@gira.com

Technical advice Gira
Tel +49 21 95 602 123
Fax +49 21 95 602 118
hotline@gira.com

JUNG
Albrecht Jung GmbH & Co. KG
Volmestraße 1
58569 Schalksmühle
Germany
Tel. +49 23 55 806 553
Fax +49 23 55 806 254
www.jung.de
international@jung.de

Technical advice Jung
Tel +49 23 55 806 555
Fax +49 23 55 806 255
international@jung.de

Insta GmbH
Hohe Steinert 10
P.O. Box 1830
58468 Lüdenscheid
Germany
Tel. +49 23 51 936 0
www.insta.de
info@insta.de

www.enet-smarthome.com

Stand 06/2017